


# How to install

## Fixed TV wall mount

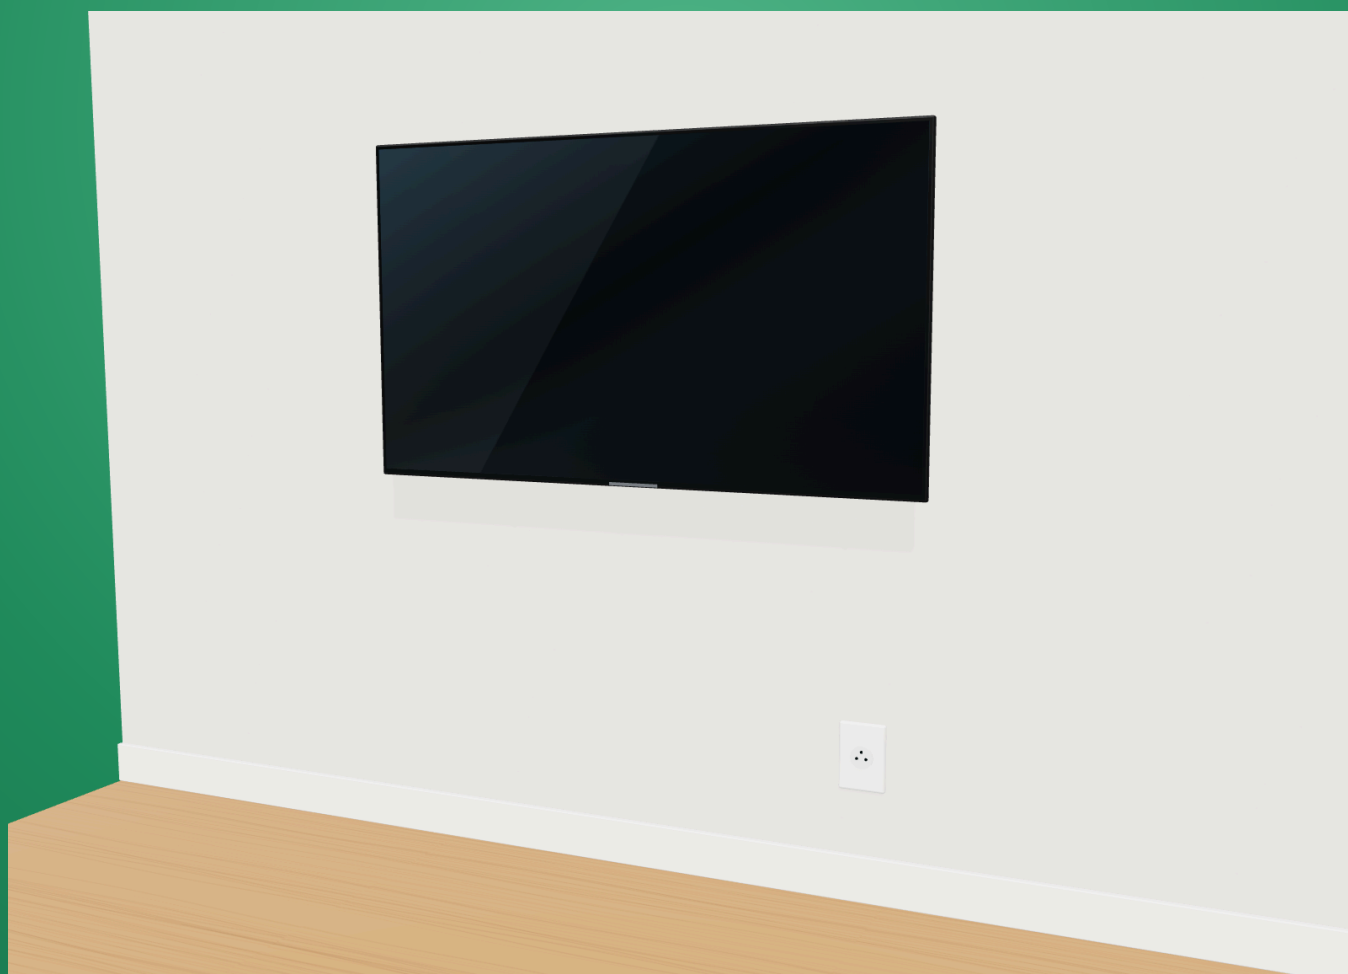

### Rather see it in 3D and hear each step?

Point your phone camera at the code. The manual opens on your phone, shows each step in 3D and reads it aloud.

1

## Choose the height

The middle of the TV goes at the eye level of someone sitting down. In a living room that is about 1.10 m (43 in) from the floor.



Scan to hear this step



2

## Check for pipes and wires

Before drilling, make sure no pipe or wire runs there. Never drill straight above or below an outlet or a switch.



Scan to hear this step



3

## Mark the holes with the level


Hold the plate against the wall and use the level to get it straight. Mark the four holes with a pencil.




Scan to hear this step



**Not like this: holes off level leave the TV crooked.**

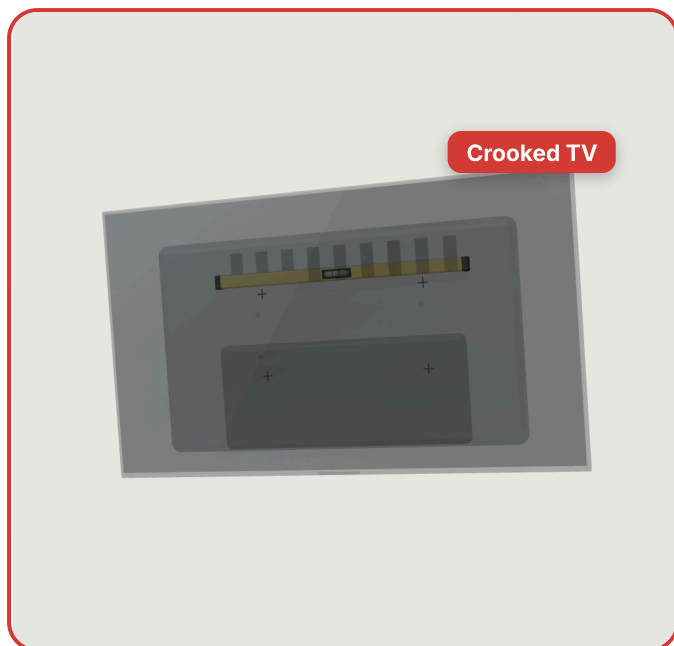

**Like this**

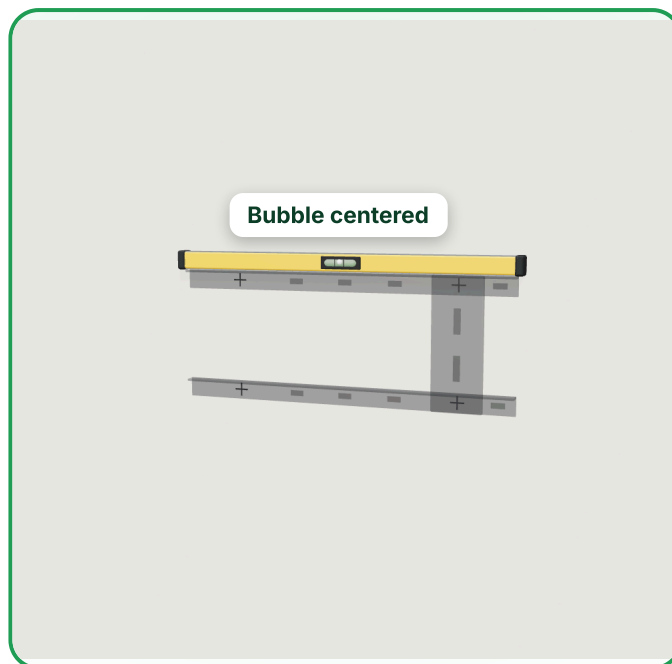


4

## Drill the wall

Drill on each mark with an 8 mm bit. On drywall, use anchors made for drywall.



Scan to hear this step

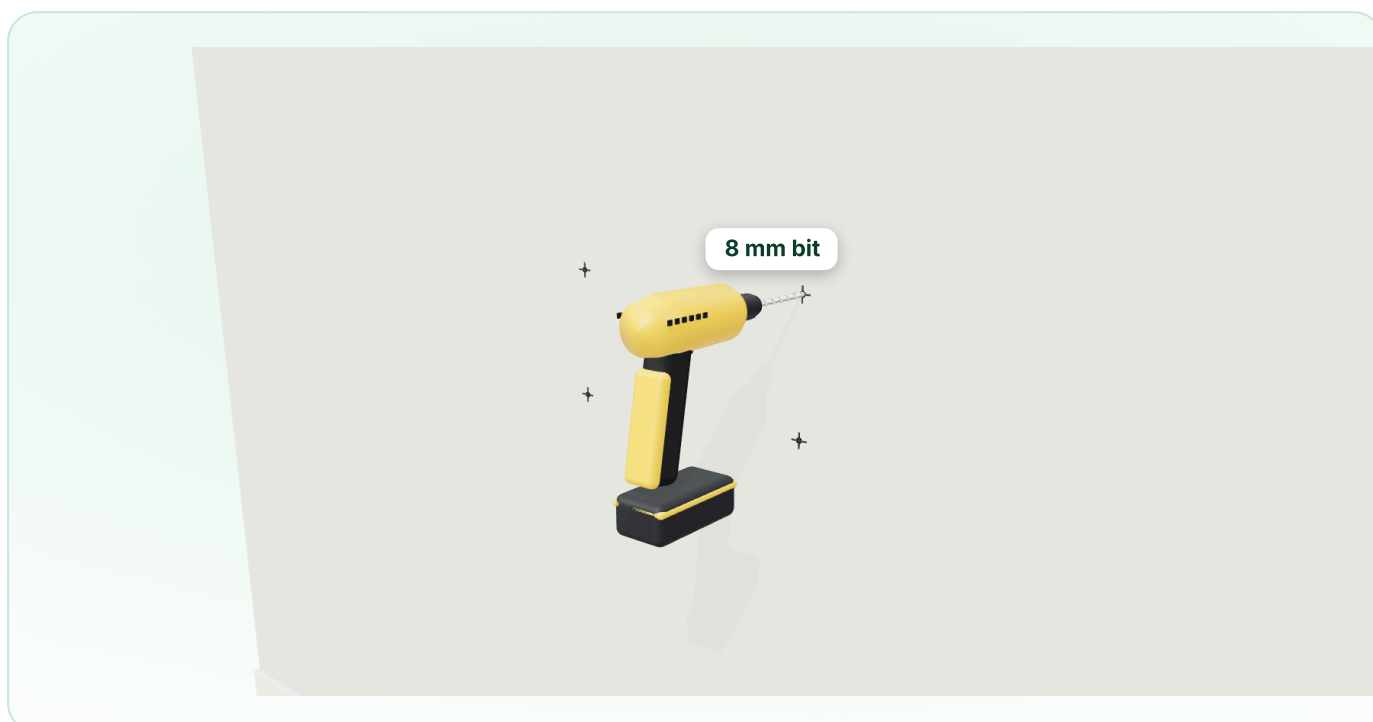


5

## Put in the anchors

Push one anchor into each hole. It must go all the way in, flush with the wall.



Scan to hear this  
step

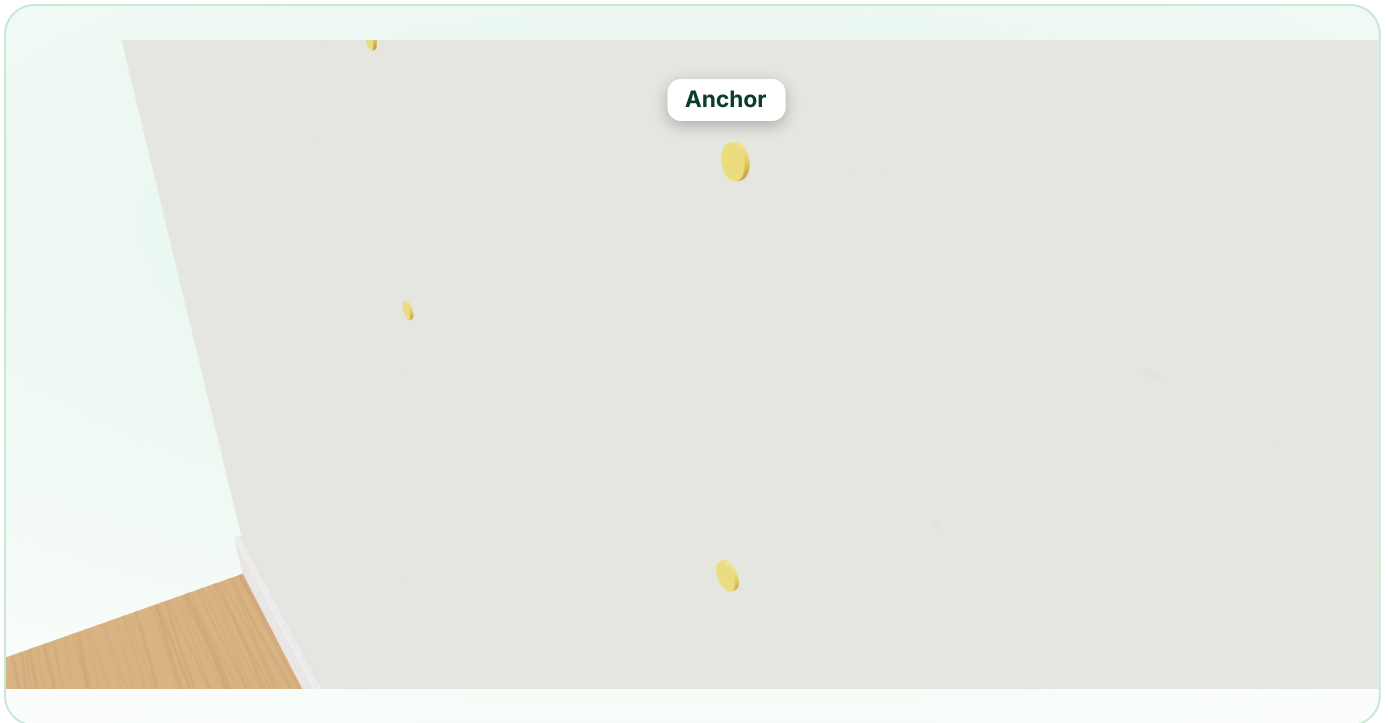


6

## Screw on the plate

Hold the plate in place and drive the four screws. Check with the level again before the final tightening.



Scan to hear this  
step

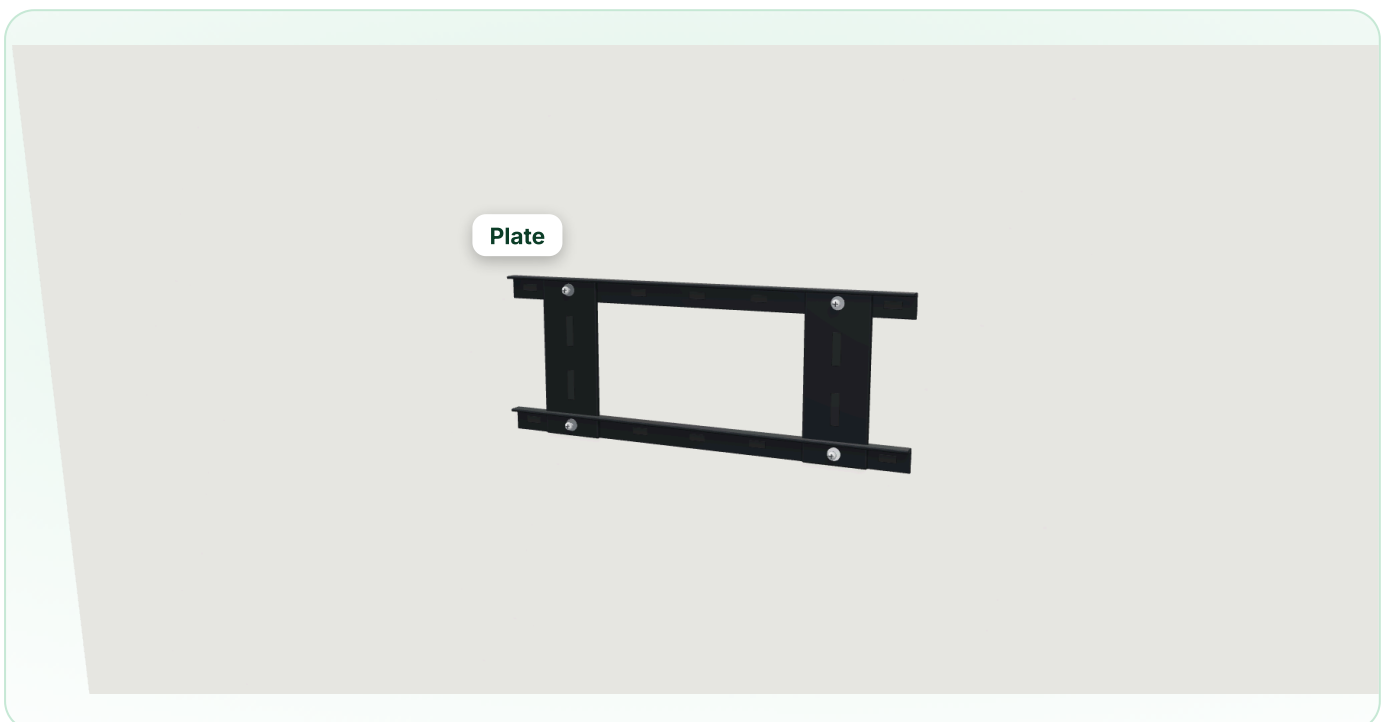

7

## Screw the arms onto the TV

Lay the TV screen-down on a soft cloth. Screw the two arms into the holes on the back of the TV.



Scan to hear this  
step




8

## Hang the TV

With two people, lift the TV and hook the arms onto the wall plate.



Scan to hear this  
step

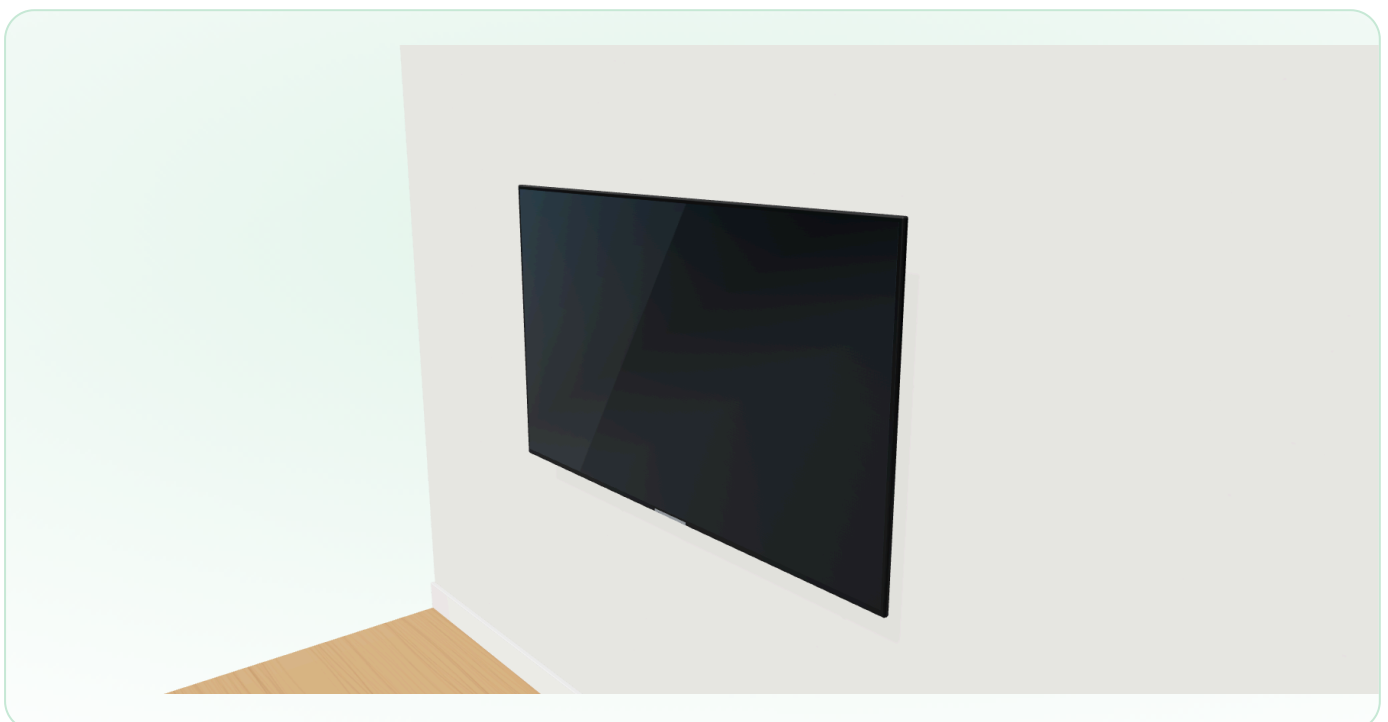

9

## Lock the TV


Tighten the locks at the bottom of the arms. They hold the TV if someone bumps into it.




Scan to hear this step



**Not like this: without the locks, a bump knocks the TV off the hooks.**

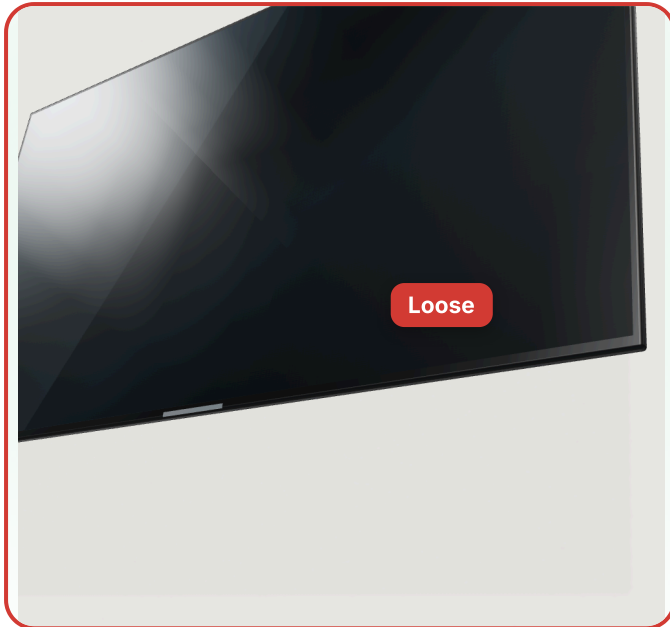

**Like this**

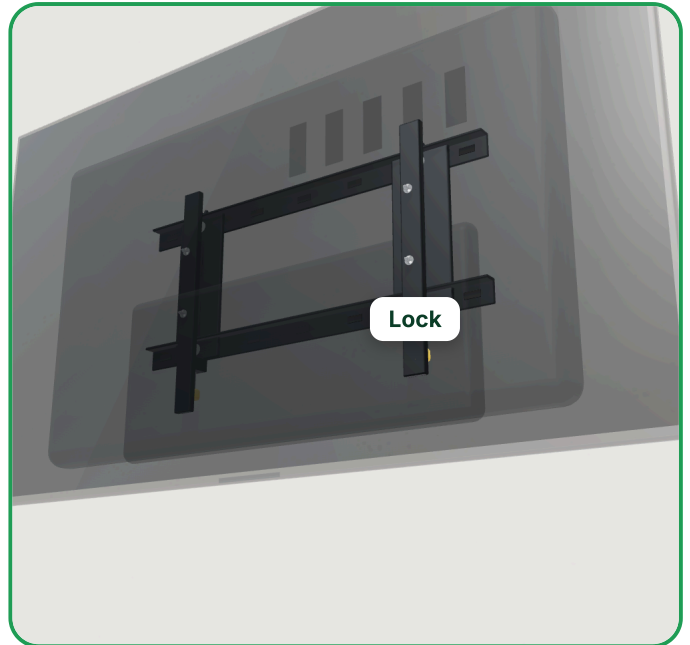

## Done!

Any questions left? Talk to Parede Firme.



See the 3D manual on your phone